



OPERATING MANUAL

CONFORMS TO PN-EN 1888:2012

Magnetico

Paradise *baby* . ul. Sobieskiego 10 . 32-400 Myślenice
sprzedaz@paradisebaby.pl . biuro@paradisebaby.pl . tel.: 12 373 44 00

www.paradise *baby* .pl

- "**WARNING** Never leave your child unattended"
- "**WARNING** Before using, make sure all blocking devices are on"
- "**WARNING** To prevent injury, make sure your child is not close when you fold or unfold this product"
- "**WARNING** Do not use an additional mattress (applies to nacelle)."
- "**WARNING** Do not let your child play with this product"
- "**WARNING** Always use the belt system (applies to seat)"
- "**WARNING** Make sure the nacelle, seat or child safety seat locking devices are correctly activated before use"
- "**WARNING** This seat is not appropriate for children under 6 months (stroller version)"
- "**WARNING** This product is not appropriate for running or roller skating"
- "declaration of undercarriage conformity with nacelle, seat and child safety seat"
- "The parking brake must be on when you put the child in and out"
- "This product is suitable for a child who cannot sit on its own, fall and move on all fours. Maximum child weight 9 kg. Applies to nacelle"
- "statement that any load attached to the handle and/or rear part of the backseat and/or sides of the pram can affect its stability"
- "In case of child safety seat used in conjunction with undercarriage, please be informed that the pram does not replace a cradle or bed, and if the child needs its sleep it is recommended that it be placed in a suitable nacelle, cradle or on a bed."

WARNINGS:

- Noncompliance with recommendations given in this manual may affect the child safety.
- The pram is intended for children from 0 to 36 months of age and up to 15 kg bodyweight
- The pram is intended for only one child.
- Never leave the pram with baby inside on an inclined surface, even when brakes are on
- Never use the pram with any component damaged.
- Before starting the assembly, make sure the product and all its components are in good order; if they are damaged, the product should not be used.
- Do not push the pram down the stairs.
- Keep the pram in a place inaccessible to children.
- While making adjustments check if pram's moving parts do not touch the child's body.
- Apply the brake at each stop.
- Maximum basket load: 3 kg
- Maximum bag load: 1.5 kg
- Each bag or another load hung on pram's handles causes a loss of stability.
- Use only genuine parts approved by the manufacturer.
- Lift front undercarriage while negotiating a kerb or step.

MAINTENANCE AND CLEANING:

- The product needs a periodic maintenance.
- Do not remove the pram upholstery.
- Clean the upholstery with a wet sponge or cloth, using a mild detergent.
- Check the wheels for wear and remove dust and sand from them.
- Lubricate the axles by pouring a few drops of machine oil between the axle and the hub.
- If the pram got wet, dry it and wipe metal parts dry with a cloth.
- Exposure to prolonged sunlight can change the colour of pram materials and fabrics.
- Avoid contact with salt water which can cause corrosion

WARRANTY TERMS:

F.P.H.U. JUNIOR-SUDER grants a warranty for the pram for 24 months following the date of purchase, provided the pram is used according to its purpose.

- All claims in relation to the product defects should be reported to the point of sale. The warranty repairs are performed by the manufacturer or a service contractor indicated by the seller.
- Physical defects detected during the warranty period will be repaired free of charge within 21 days of delivery of the pram (via the seller) to the facility.
- The warranty period will be extended by the duration of repair.
- The product should be returned for repair in a clean condition.
- No duplicate will be given if the warranty card is lost.
- The warranty is valid in the EU.
- The warranty for a consumer product does not exclude or suspend the buyer's rights resulting from nonconformity with the contract.

WARRANTY DOES NOT COVER:

- Natural wear and tear.
- Damage caused by incorrect use nonconforming with the manual.
- Repairs by unauthorized persons.
- Damage attributable to the user.
- Fabric fading due to a prolonged exposure to sunlight.

A: Folded pram without wheels.

B: Unfolded pram with wheels.

C: Before folding remove nacelle/ stroller/ child safety seat. To fold, unlock the protection **(1)** on the right-hand side of the pram by moving the grip upwards. Now, pull both rods **(2)** simultaneously upwards. The pram will fold.

D: Handle height adjustment. Press buttons **(1)** on the outer side of the handle and adjust the handle height as needed.

E: Wheel installation. To install a wheel, pull the hub onto the axle, simultaneously holding the protection **(1)** until the wheel locks on the axle. Removal of rear wheels. Press and hold **(1)** and remove the wheel from the hub.

F: Rear wheel brake. To lock the rear wheels, press the brake pedal down **(1)** with your feet. Move the pedal up to unlock the wheels.

G: Nacelle installation. To install the nacelle onto the pram frame, put the catch **(1)** into the holder **(2)** on each side of the pram. The nacelle will lock automatically.

H: To fold the hood, simultaneously press and hold buttons **(1)**. Canvass cover. To install the canvass cover, pull it onto the nacelle and close press studs **(2)**.

I: Nacelle removal. To remove the nacelle, press the button **(1)** on both sides of the pram. Now, pull the nacelle up and out of the fastenings.

J: Stroller installation. To install the stroller onto the pram frame, put the catch **(1)** into the holder **(2)** on each side of the pram. The stroller will lock automatically.

K: Stroller removal. To remove the stroller, press the button **(1)** on both sides of the pram. Now, pull the stroller up and out of the fastenings.

L: Barrier. To install, close the catches **(1)** on both sides of the pram. To remove, press the button **(1)** and remove the barrier. After removing the barrier, remember to put on the crotch belt. Bow **(2)** height adjustment.

M: Footrest. To adjust the footrest, simultaneously press the buttons **(1)** and slide it the desired position.

N: Stroller backrest. The backrest is adjustable in 4 positions. To adjust, raise the backrest to the desired position, or pull the lever **(1)** and lower to the desired position.

O: To adjust the hood position, tilt it back or forth.

P: Five-point safety harness. To buckle up, press the fork **(2)** into the lock **(1)**. To unbuckle, press the button **(3)** in the fork **(2)** and remove from the lock **(1)**.

R: Installation of adapters for the Kite safety seat. The adapter allows fastening the safety seat in the pram structure. To fasten, slide the adapters **(1)** into suitable places on both sides of the pram. The safety seat with adapters installed can be fastened on the structure. The safety seat is optional.

S: To remove the Kite safety seat from the adapters, press the grey button **(1)** and lift the safety seat.

T: **(1)** Nacelle ventilation.

(2) Anti-slippery strips. They also protect the floor from scratching.

(3) Cradle lock. Placed in four points at the back of nacelle.




U: To lock the front wheels for pushing the pram straight ahead, press the red button and turn the wheels inwards.

V: Installation and removal of pram axle: press the button **(1)** and remove the axle with the wheel

ATTENTION! When putting the axle back, make sure it is installed correctly.

Pram equipment: frame and set of wheels, nacelle with mattress and canvass cover, stroller with canvass cover and barrier, bag (to be attached to the pram handle), all-purpose anti-rain film, mosquito net (for nacelle and stroller), warranty card, and manual.

ATTENTION! The max. pressure in tyres is 1.0 bar

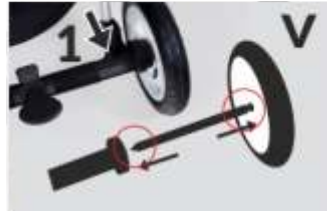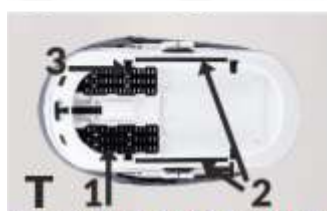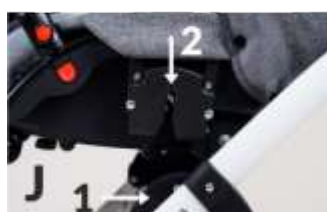

OPERATING MANUAL

No	Date of claim	Date of repair	Description of repair	Signature
1				
2				
3				

sale date	Store stamp	Buyer signature
-----------	-------------	-----------------