



## OPERATING MANUAL

CONFORMS TO PN-EN 1888:2012

# Melody

Paradise *baby* . ul. Sobieskiego 10 . 32-400 Myślenice  
sprzedaz@paradisebaby.pl . biuro@paradisebaby.pl . tel.: 12 373 44 00

www.paradise *baby* .pl

- "**WARNING** Never leave your child unattended"
- "**WARNING** Before using, make sure all blocking devices are on"
- "**WARNING** To prevent injury, make sure your child is not close when you fold or unfold this product"
- "**WARNING** Do not use an additional mattress (applies to nacelle)."
- "**WARNING** Do not let your child play with this product"
- "**WARNING** Always use the belt system (applies to seat)"
- "**WARNING** Make sure the nacelle, seat or child safety seat locking devices are correctly activated before use"
- "**WARNING** This seat is not appropriate for children under 6 months (stroller version)"
- "**WARNING** This product is not appropriate for running or roller skating"
- "declaration of undercarriage conformity with nacelle, seat and child safety seat"
- "The parking brake must be on when you put the child in and out"
- "This product is suitable for a child who cannot sit on its own, fall and move on all fours. Maximum child weight 9 kg. Applies to nacelle"
- "statement that any load attached to the handle and/or rear part of the backseat and/or sides of the pram can affect its stability"
- "In case of child safety seat used in conjunction with undercarriage, please be informed that the pram does not replace a cradle or bed, and if the child needs its sleep it is recommended that it be placed in a suitable nacelle, cradle or on a bed."

## **WARNINGS:**

- Noncompliance with recommendations given in this manual may affect the child safety.
- The pram is intended for children from 0 to 36 months of age and up to 15 kg bodyweight
- The pram is intended for only one child.
- Never leave the pram with baby inside on an inclined surface, even when brakes are on
- Never use the pram with any component damaged.
- Before starting the assembly, make sure the product and all its components are in good order; if they are damaged, the product should not be used.
- Do not push the pram down the stairs.
- Keep the pram in a place inaccessible to children.
- While making adjustments check if pram's moving parts do not touch the child's body.
- Apply the brake at each stop.
- Maximum basket load: 3 kg
- Maximum bag load: 1.5 kg
- Each bag or another load hung on pram's handles causes a loss of stability.
- Use only genuine parts approved by the manufacturer.
- Lift front undercarriage while negotiating a kerb or step.

## **MAINTENANCE AND CLEANING:**

- The product needs a periodic maintenance.
- Do not remove the pram upholstery.
- Clean the upholstery with a wet sponge or cloth, using a mild detergent.
- Check the wheels for wear and remove dust and sand from them.
- Lubricate the axles by pouring a few drops of machine oil between the axle and the hub.
- If the pram got wet, dry it and wipe metal parts dry with a cloth.
- Exposure to prolonged sunlight can change the colour of pram materials and fabrics.
- Avoid contact with salt water which can cause corrosion

**WARRANTY TERMS:**

F.P.H.U. JUNIOR-SUDER grants a warranty for the pram for 24 months following the date of purchase, provided the pram is used according to its purpose.

- All claims in relation to the product defects should be reported to the point of sale. The warranty repairs are performed by the manufacturer or a service contractor indicated by the seller.
- Physical defects detected during the warranty period will be repaired free of charge within 21 days of delivery of the pram (via the seller) to the facility.
- The warranty period will be extended by the duration of repair.
- The product should be returned for repair in a clean condition.
- No duplicate will be given if the warranty card is lost.
- The warranty is valid in the EU.
- The warranty for a consumer product does not exclude or suspend the buyer's rights resulting from nonconformity with the contract.

**WARRANTY DOES NOT COVER:**

- Natural wear and tear.
- Damage caused by incorrect use nonconforming with the manual.
- Repairs by unauthorized persons.
- Damage attributable to the user.
- Fabric fading due to a prolonged exposure to sunlight.

**A:** Folded pram without wheels.

**B:** Unfolded pram with wheels.

**C:** Before folding remove nacelle/ stroller/ child safety seat. To fold, unlock the protection **(1)** on the right-hand side of the pram by moving the grip upwards. Now, pull both rods **(2)** simultaneously upwards. The pram will fold.

**D:** Handle height adjustment. Press buttons **(1)** on the outer side of the handle and adjust the handle height as needed.

**E:** Wheel installation. To install a wheel, pull the hub onto the axle, simultaneously holding the protection **(1)** until the wheel locks on the axle. Removal of rear wheels. Press and hold **(1)** and remove the wheel from the hub.

**F:** Rear wheel brake. To lock the rear wheels, press the brake pedal down **(1)** with your feet. Move the pedal up to unlock the wheels.

**G:** Nacelle installation. To install the nacelle onto the pram frame, put the catch **(1)** into the holder **(2)** on each side of the pram. The nacelle will lock automatically.

**H:** To fold the hood, simultaneously press and hold buttons **(1)**. Canvass cover. To install the canvass cover, pull it onto the nacelle and close press studs **(2)**.

**I:** Nacelle removal. To remove the nacelle, press the button **(1)** on both sides of the pram. Now, pull the nacelle up and out of the fastenings.

**J:** Stroller installation. To install the stroller onto the pram frame, put the catch **(1)** into the holder **(2)** on each side of the pram. The stroller will lock automatically.

**K:** Stroller removal. To remove the stroller, press the button **(1)** on both sides of the pram. Now, pull the stroller up and out of the fastenings.

**L:** Barrier. To install, close the catches **(1)** on both sides of the pram. To remove, press the button **(1)** and remove the barrier. After removing the barrier, remember to put on the crotch belt. Bow **(2)** height adjustment.

**M:** Footrest. To adjust the footrest, simultaneously press the buttons **(1)** and slide it the desired position.

**N:** Stroller backrest. The backrest is adjustable in 4 positions. To adjust, raise the backrest to the desired position, or pull the lever **(1)** and lower to the desired position.

**O:** To adjust the hood position, tilt it back or forth.

**P:** Five-point safety harness. To buckle up, press the fork **(2)** into the lock **(1)**. To unbuckle, press the button **(3)** in the fork **(2)** and remove from the lock **(1)**.

**R:** Installation of adapters for the Kite safety seat. The adapter allows fastening the safety seat in the pram structure. To fasten, slide the adapters **(1)** into suitable places on both sides of the pram. The safety seat with adapters installed can be fastened on the structure. The safety seat is optional.

**S:** To remove the Kite safety seat from the adapters, press the grey button **(1)** and lift the safety seat.

**T:** **(1)** Nacelle ventilation.

**(2)** Anti-slippery strips. They also protect the floor from scratching.

**(3)** Cradle lock. Placed in four points at the back of nacelle.

**U:** To lock the front wheels for pushing the pram straight ahead, press the red button and turn the wheels inwards.

**V:** Installation and removal of pram axle: press the button **(1)** and remove the axle with the wheel

**ATTENTION!** When putting the axle back, make sure it is installed correctly.

Pram equipment: frame and set of wheels, nacelle with mattress and canvass cover, stroller with canvass cover and barrier, bag (to be attached to the pram handle), all-purpose anti-rain film, mosquito net (for nacelle and stroller), warranty card, and manual.

**ATTENTION!** The max. pressure in tyres is 1.0 bar

# OPERATING MANUAL

No	Date of claim	Date of repair	Description of repair	Signature
1				
2				
3				

sale date	Store stamp	Buyer signature
-----------	-------------	-----------------